

Hand Soap Dispenser Mounting Instructions:



DirtCop
HAND CLEANER


1. Measure desired mounting location to ensure sufficient space for the dispenser.
Vertical Space needed - approximately 18 inches
Horizontal Space needed - approximately 6 inches
2. Choose appropriate mounting method.
 - A) Clean surface with alcohol pad or appropriate cleaner to ensure adhesion when using the two pieces of double sided tape provided.
 - B) Pre-mark and drill mounting holes using screws and anchors.

Hand Soap Loading Instructions:

1. Pull off Red Over-Cap before loading. (See Diagram "A")
2. Turn soap container upside down and load in dispenser.
3. Pull out breather plug before pumping dispenser. (See Diagram "B")
4. Pump dispenser 2-3 times until soap dispenses.


Helpful Hint: Clean the white collar inside the dispenser when soap or debris is present.

Diagram "A"

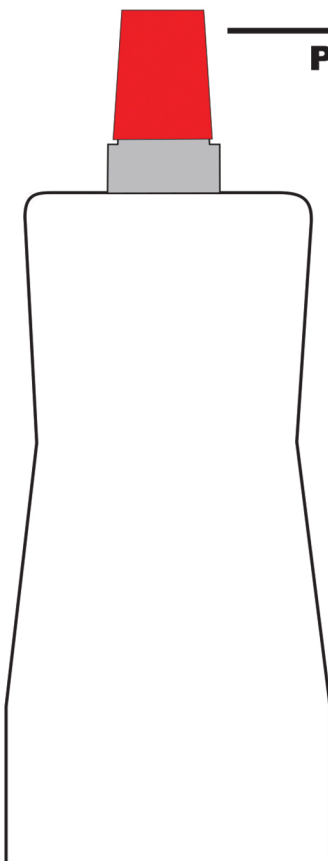

IMPORTANT!
**PULL OFF RED OVER-CAP
BEFORE LOADING
INTO DISPENSER**

Diagram "B"

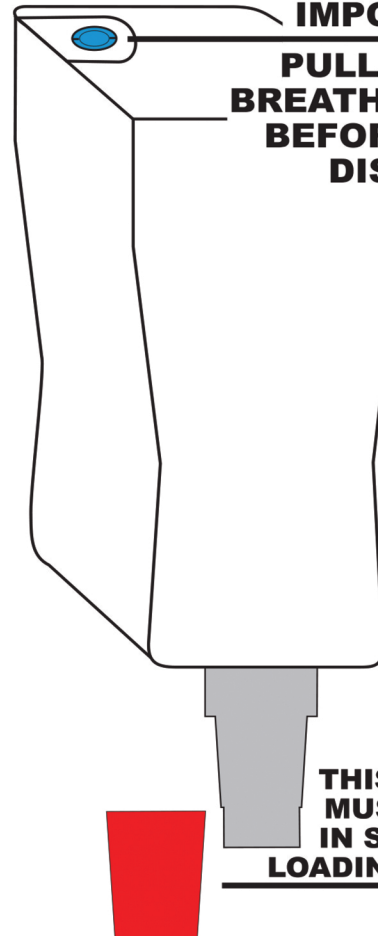

IMPORTANT!
**PULL THIS BLUE
BREATHER PLUG OUT
BEFORE PUMPING
DISPENSER**

**THIS RED OVER-CAP
MUST BE REMOVED
IN STEP "1" BEFORE
LOADING INTO DISPENSER**